Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver & Rubber Mallet (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	NIGHTSTAND	1 PC	
В	LEG	4 PCS	
C	LEG SUPPORT FRONT	1 PC	
D	LEG SUPPORT BACK	1 PC	
E	LEG SUPPORT L/R	2 PCS	

PART LIST				
ITEM	DESCRIPTION		QTY	
1	JCBC BOLT M6 x 50mm	ommun⊏()	4 PCS	
2	JCBC BOLT M6 x 70mm	ammana ⊆()	4 PCS	
3	M6 SPRING WASHER	0	8 PCS	
4	WOOD SCREW M4 x 30mm		6 PCS	
5	WOOD DOWEL M8 x 30mm		5 PCS	
6	M4 ALLEN KEY (BALL SHAPE)		1 PC	
7	CONNECTOR SCREW FASTENERS	C	4 PCS	







